

**CABLE COMUNICACION PLC MITSUBISHI FX - TERMINAL GP MODO 422**

GP DB 25 MACHO	-----	MIT. FX DB25 MACHO																								
7 FG	-----	GND 7																								
11 SDA	-----	RX+ 2																								
15 SDB	-----	RX- 15																								
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;">9 TRMX</td> <td style="width: 10%; text-align: center;">-----</td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> </tr> <tr> <td>10 RDA</td> <td style="text-align: center;">-----</td> <td style="text-align: center;">TX+</td> <td style="text-align: center;">3</td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> </tr> <tr> <td>16 RDB</td> <td style="text-align: center;">-----</td> <td style="text-align: center;">TX-</td> <td style="text-align: center;">16</td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> </tr> </table>			9 TRMX	-----							10 RDA	-----	TX+	3					16 RDB	-----	TX-	16				
9 TRMX	-----																									
10 RDA	-----	TX+	3																							
16 RDB	-----	TX-	16																							
22 ERA	-----	CTS+ 4																								
19 ERB	-----	CTS- 17																								
21 CSA	-----	RTS+ 5																								
18 CSB	-----	RX- 18																								
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">0V</td> <td style="text-align: center;">20</td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">/PWE</td> <td style="text-align: center;">21</td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> </tr> </table>													0V	20							/PWE	21				
		0V	20																							
		/PWE	21																							

UTILIZAR CABLE DE PARES TRENZADOS UTILIZANDO UN PAR PARA TRANSMISION Y OTRO PARA RECEPCION. NO CONFUNDIR LAS DOS PUNTAS DEL CABLE.

**CABLE COMUNICACION PLC MITSUBISHI FX0//FX2  
con TERMINAL GP MODO 422**

GP DB 25 MACHO	-----	MIT. FX0 DB25 MACHO	DB8 MINIDIN MACHO																								
7 FG	-----	GND 7	3																								
11 SDA	-----	RX+ 2	2																								
15 SDB	-----	RX- 15	1																								
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;">9 TRMX</td> <td style="width: 10%; text-align: center;">-----</td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> </tr> <tr> <td>10 RDA</td> <td style="text-align: center;">-----</td> <td style="text-align: center;">TX+</td> <td style="text-align: center;">3</td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> </tr> <tr> <td>16 RDB</td> <td style="text-align: center;">-----</td> <td style="text-align: center;">TX-</td> <td style="text-align: center;">16</td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> <td style="width: 10%;"></td> </tr> </table>				9 TRMX	-----							10 RDA	-----	TX+	3					16 RDB	-----	TX-	16				
9 TRMX	-----																										
10 RDA	-----	TX+	3																								
16 RDB	-----	TX-	16																								
18 CSB	-----																										
19 ERB	-----																										
21 CSA	-----																										
22 ERA	-----																										
4 RS	-----																										
5 CS	-----																										



C/. Riu, 63 - Tel. 964 50 60 40 - Fax 964 50 60 41  
12540 VILA-REAL (Castellón)